

KODAK Portable Wireless Speaker

Flame Light with TWS Technology PWS-2269



User Manual

Please read this manual carefully before operating the speaker.
Please keep this manual with you for further reference.

IMPORTANT SAFETY INSTRUCTIONS

 
Thank you for choosing PWS-2269 as your source for entertainment!,

You can use this item with iPad, iPhone, iPod and many types of smart-phone to stream music and enjoy hands-free calling. In order to get the best results please read this manual before using the product.


IMPORTANT SAFETY INFORMATION

1. Do not expose the speaker to liquid, rain, moisture or humidity.
2. Do not use abrasive cleaners to clean the speaker case as they may damage the finish.
3. Do not drop, disassemble, deform, modify or insert any objects into this product.
4. Do not attempt to repair, modify or disassemble the product yourself. This product does not contain any user-serviceable components and may void the warranty.
5. Do not place this product in to contact with any sharp objects as this may cause scratches and operating damage.
6. Do not attempt to replace the product battery, it is built-in and is not user changeable.
7. Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
8. Do not expose the speaker to extremely high or low temperatures.
9. Keep the unit away from direct sunlight.


WHAT'S INSIDE

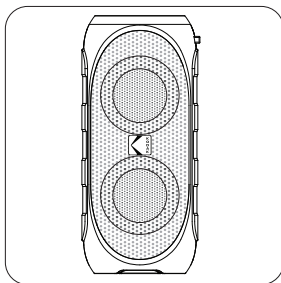

A

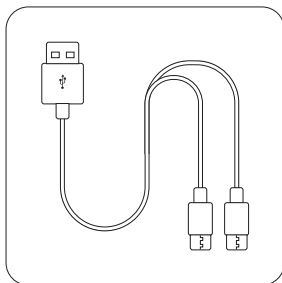 


B

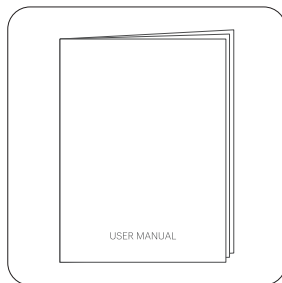 

C

- A. BLUETOOTH speaker
- B. Type-C charging cable
- C. User manual

 PRODUCT OVERVIEW

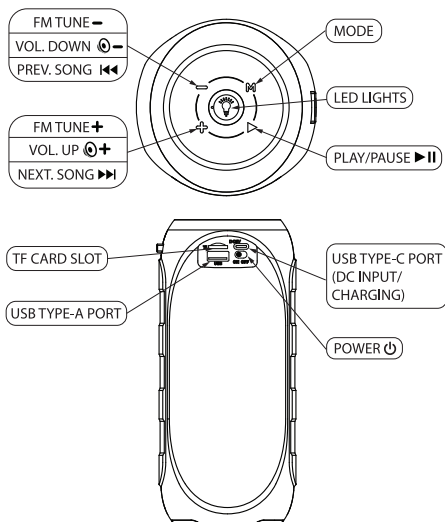

TOP CONTROL PANEL

1. — : In FM mode short press to move to previous frequency; in BT/TF/USB mode short press move to previous track, long press to reduce the volume.
2. +: In FM mode short press to move to next frequency; in BT/TF/USB mode short press move to next track, long press to increase the volume.
3. M: Press to switch mode between Bluetooth/FM.
4. LED: Press to turn on/off the lights.
5. PLAY: Press to play/pause music in all modes.

REAR CONTROL PANEL

 
1. TF: Insert TF card into the slot and speaker will start playing music stored on the memory card.
2. USB: Insert USB to playback music stored on your USB drive.
3. DC5V: Please use the supplied Type-C cable to charge the speaker.
4. ON/OFF: Slide the switch to turn on/off the speaker.

BASIC OPERATION

TURNING THE UNIT ON/OFF

Slide the Power button on the back of the unit to power on/off the speaker. Speaker will enter Bluetooth pairing mode and the LED light on front panel will turn on.

POWER ON/OFF

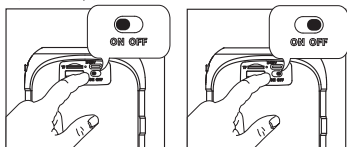

BLUETOOTH OPERATION

Power on the speaker and it will enter Bluetooth mode. Put the Bluetooth device within 10 meters, turn on the Bluetooth function on your device and search for "PWS-2269" and connect. Once the pairing is completed unit will start playing the music from your device.

 
BLUETOOTH MODE




FM MODE

Press M (mode) button to select FM mode. You can listen to any radio frequency from 87.5 to 108MHz. Short press "—" or "+" to move to previous or next frequency. Long press to adjust volume.

RADIO MODE

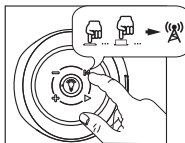

LED LIGHTING

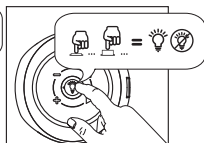 


LED LIGHT

Press to turn on/off the Lights.

ADJUSTING VOLUME

Long press +/- buttons to increase /decrease the volume to your desired levels.

 
VOLUME ADJUSTMENT

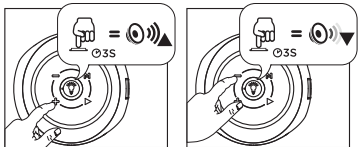

PLAY/PAUSE

Press PLAY button to pause the music, press again to resume play.

 MUSIC CONTROL

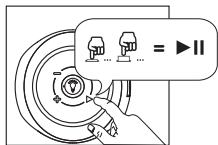

BASIC OPERATION

 
TF CARD MODE

Insert TF card into the slot and speaker will start playing music stored on the card.

Press Play/Pause button to play or pause the music.

Short press “—” or “+” to select previous or next song.

Long press “—” or “+” to adjust the volume.

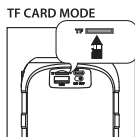


USB MODE

Insert USB into the slot and speaker will start playing music stored on USB drive.

Press Play/Pause button to play or pause the music.

Short press “—” or “+” to select previous or next song.

 Long press “—” or “+” to adjust the volume

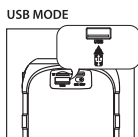


CHARGING THE SPEAKER

This speaker has a built-in rechargeable battery. Please use the supplied Type-C cable to charge the battery.


The charging current voltage is 5V/1A.

 Please use the charger that passes the regular manufacturer's safety certification.

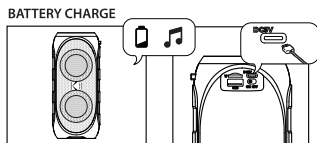

TWS OPERATION

 Power on two PWS-2269 speakers and enter Bluetooth mode on both speakers. Press and hold “M” button for 3 seconds on either speaker and the two speakers will be connected automatically. Turn on Bluetooth function on your mobile/other devices and search for “PWS-2268”. When connected music will be played on both the speakers.

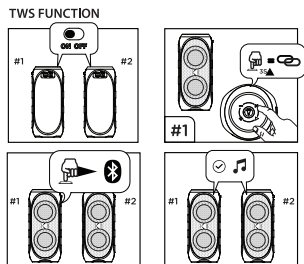

To disconnect TWS connection press and hold “M” button for 3 seconds again.

SPECIFICATION

Wireless connection	
Bluetooth Version	5.1
Bluetooth profiles	A2DP, AVRCP, HFP, HSP, AVRCP
BT Transmission Range	About 10m (without obstacles)
Wireless output	Class2 : +4dBm (-6 ~ +4dBm)
Wireless band	2400MHZ—2500MHZ
Battery	
Battery Type	Lithium 18650 battery
Capacity	3.7v 1200mAh
Play time	About 2 hours for music play (80% volume) About 8 hours for phone call (80% volume)
Charge time	About 5±0.5 hours
Speaker	
Speaker size	57mm,5W*2
Speaker Impedance	4 Ohm
Output	10W RMS @ 10% THD
Frequency Response	FO-16KHz
Sensitivity	83±3 dBm
Distortion	<5%
Others	
Standby current	5 mA
Consumption	1Khz 210MA
Charge port	Type-C, DC 5V
Product size	80*80*192mm
Product weight	485g
Material	ABS+Silicone+Metal mesh

Note: Specifications are subject to change for continuous improvement without prior notice.

INFORMACIÓN DE SEGURIDAD IMPORTANTE

 
 
¡Le agradecemos su elección del PWS-2269 como su fuente de entretenimiento!

Puede usar este artículo con iPad, iPhone, iPod y muchos tipos de teléfonos inteligentes para transmitir música y disfrutar de llamados con manos libres. Lea este manual antes de usar el dispositivo para obtener los mejores


INFORMACIÓN DE SEGURIDAD IMPORTANTE

1. No exponga el altoparlante a líquidos, lluvia o humedad.
2. No utilice limpiadores abrasivos para limpiar la caja del altoparlante, ya que pueden dañar el acabado.
3. No deje caer, ni desensamble, modifique o inserte ningún objeto en este producto.
4. No intente reparar, modificar, desensamblar el producto usted mismo. Este producto no contiene ningún componente que pueda reparar el usuario, y puede invalidar la garantía.
5. No coloque este producto en contacto con objetos filosos, ya que esto podría causar rasguños y daños operativos.
6. No intente reemplazar la batería del producto, está integrada y no la puede cambiar el usuario.
7. Observe todas las señales y figuras que requieran apagar un dispositivo eléctrico o producto de radio RF en ciertas áreas designadas.
8. No exponga el altoparlante a temperaturas extremadamente altas o bajas.
9. Mantenga el aparato alejado de la luz solar directa.

CONTENIDO DE LA CAJA

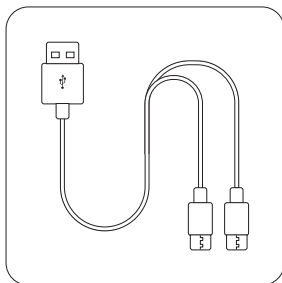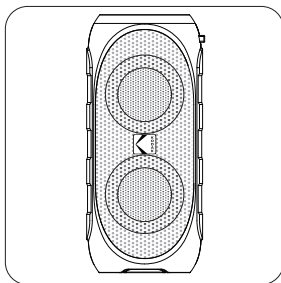


B

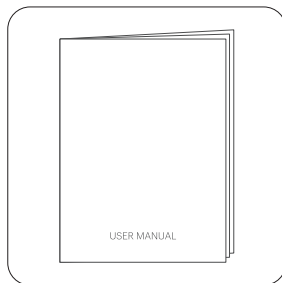 

C

- A. Altavoz de BLUETOOTH x 1
- B. Cable de carga x 1
- C. Instrucciones x 1

 DESCRIPCIÓN GENERAL DEL PRODUCTO

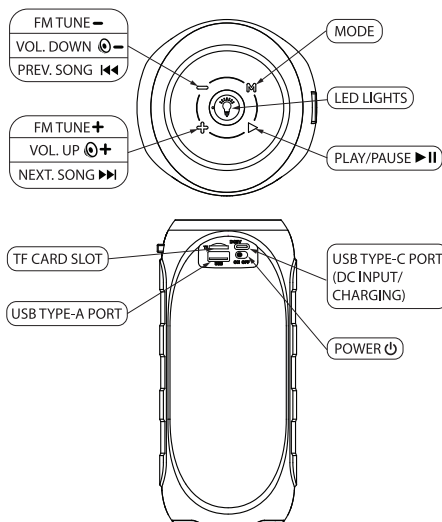

FM TUNE -	SINTONIZAR FM -
VOL. DOWN	VOL. DESCENDENTE
PREV. SONG	CANCIÓN ANTERIOR
FM TUNE +	SINTONIZAR FM +
VOL. UP	VOL. ASCENDENTE
NEXT SONG	CANCIÓN SIGUIENTE
TF CARD SLOT	RANURA DE TARJETA TF
USB TYPE-A PORT	PUERTO USB TIPO A
MODE	MODO
LED LIGHTS	LUCES LED
PLAY/ PAUSE	REPRODUCIR/PAUSAR
USB TYPE-C PORT (DC INPUT/CHARGING)	PUERTO USB TIPO C (ENTRADA CC/CARGA)
POWER	ENCENDIDO

DESCRIPCIÓN GENERAL DEL PRODUCTO

PANEL DE CONTROL SUPERIOR

1. — : En el modo FM, presione brevemente para pasar a la frecuencia anterior; en el modo BT/TF/USB presione brevemente para ir a la pista anterior; mantenga presionado para reducir el volumen.
2. +: En el modo FM, presione brevemente para pasar a la siguiente frecuencia; en el modo BT/TF/USB presione brevemente para pasar a la siguiente pista; mantenga presionado para aumentar el volumen.
3. M: Presione para cambiar de modo entre Bluetooth/FM.
4. LED: Presione para encender/apagar las luces.
5. REPRODUCIR: Presione para reproducir/pausar música en todos los modos.

PANEL DE CONTROL TRASERO

 
1. TF: Inserte la tarjeta TF en la ranura y el altoparlante comenzará a reproducir la música almacenada en la tarjeta de memoria.
2. USB: Inserte USB para reproducir música almacenada en su unidad USB.
3. CC5V: Use el cable suministrado tipo C para cargar el altoparlante.
4. Encendido/Apagado: Deslice el interruptor para encender/apagar el altoparlante.

FUNCIONAMIENTO BÁSICO

ENCENDIDO/APAGADO DEL APARATO

Deslice el botón de encendido en la parte posterior de la unidad para encender/apagar el altoparlante. El altoparlante ingresará al modo de emparejamiento Bluetooth y la luz LED en el panel frontal se encenderá.

POWER ON/OFF

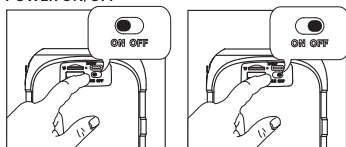


BLUETOOTH OPERATION

Encienda el altoparlante y entrará en modo Bluetooth. Coloque el dispositivo de Bluetooth a menos de 10 metros, encienda la función de Bluetooth en su dispositivo, busque "PWS-2269" y conecte. Una vez que se complete el emparejamiento, el aparato comenzará a reproducir la música desde su dispositivo.

BLUETOOTH MODE



 RADIO MODE

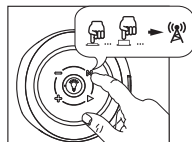


MODO FM

Presione el botón M (modo) para seleccionar el modo FM. Puede escuchar cualquier frecuencia de radio desde 87.5 a 108MHz.

Mantenga presionado "-" o "+" para pasar a la frecuencia anterior o siguiente.

Presione brevemente para ajustar el volumen.

 LED LIGHTING

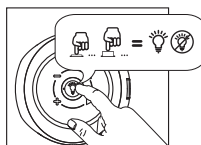


LUZ LED

Presione para encender/apagar las luces.

AJUSTE DEL VOLUMEN

Mantenga presionados los botones +/- para aumentar/disminuir el volumen a los niveles deseados.

 VOLUME ADJUSTMENT

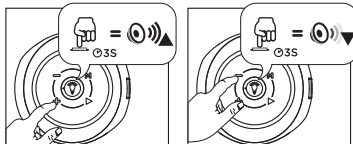


FUNCIONAMIENTO BÁSICO

REPRODUCIR / PAUSAR

Presione brevemente el botón REPRODUCIR/PAUSAR para pausar la música y presione nuevamente para reanudar la reproducción.

 MUSIC CONTROL

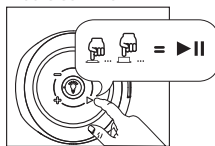


MODO DE TARJETA TF

Inserte una tarjeta TF en la ranura y el altoparlante comenzará a reproducir la música almacenada en la tarjeta. Presione el botón reproducir/pausar para reproducir o pausar la música.

Presione brevemente "—" o "+" para seleccionar la canción anterior o siguiente.

Mantenga presionado "—" o "+" para ajustar el volumen.

 TF CARD MODE

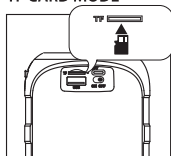


MODO USB

Inserte el USB en la ranura y el altoparlante comenzará a reproducir la música almacenada en la unidad USB. Presione el botón reproducir/pausar para reproducir o pausar la música.

Presione brevemente "—" o "+" para seleccionar la canción anterior o siguiente.

Mantenga presionado "—" o "+" para ajustar el volumen

 USB MODE


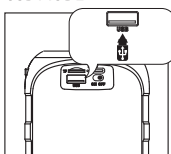


CARGA DEL ALTOPARLANTE

Este altoparlante lleva incorporada una batería recargable. Use el cable suministrado tipo C para cargar la batería. La tensión de corriente de carga es 5V/1A.

Use el cargador que pase la certificación de seguridad del fabricante.

  BATTERY CHARGE

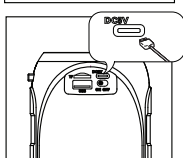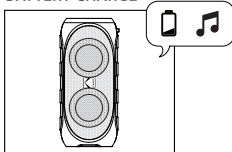

FUNCIONAMIENTO BÁSICO

 
 
 
 
TWS OPERATION

Power on two PWS-2269 speakers and enter Bluetooth mode on both speakers. Press and hold “M” button for 3 seconds on either speaker and the two speakers will be connected automatically.

Turn on Bluetooth function on your mobile/other devices and search for “PWS-2268”. When connected music will be played on both the speakers.

To disconnect TWS connection press and hold “M” button for 3 seconds again.

TWS FUNCTION

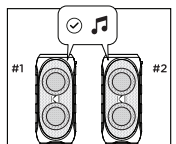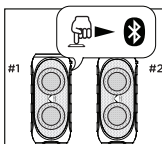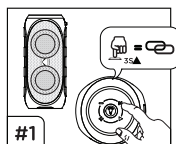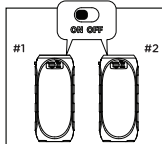

ESPECIFICACIONES

Conexión inalámbrica	
Versión de Bluetooth	5.1
Perfiles de Bluetooth	A2DP, AVRCP, HFP, HSP, AVRCP
Rango de transmisión BT	Aproximadamente 10 m (sin obstáculos)
Salida inalámbrica	Clase 2 : +4dBm (-6 ~+4dBm)
Banda inalámbrica	2400MHZ—2500MHZ
Batería	
Tipo de batería	<i>Lithium 18650 battery</i>
Capacidad	3.7v 1200mAh
Tiempo de reproducción	<i>Alrededor de 2 horas para la reproducción de música (80% del volumen) Alrededor de 8 horas para llamados telefónicos (80% del volumen)</i>
Tiempo de carga	Alrededor de 5±0,5 horas
Altoparlante	
Tamaño del altoparlante	57mm,5W*2
Impedancia del altavoz	4 Ohm
Salida	10W RMS @ 10% THD
Respuesta en frecuencia	FO-16KHz
Sensibilidad	83±3 dBm
Distorsión	<5%
Otros	
Corriente de espera	5 mA
Consumo	1Khz 210MA
Puerto de carga	Tipo-C, CC 5V T, CC 5V
Dimensiones del producto	80*80*192mm
Peso del producto	485 g
Material	ABS+Silicone+Metal mesh

Note: Specifications are subject to change for continuous improvement without prior notice.

www.starglory.com.hk/kodak

© 2023 Made in China for Star Glory Ltd.
833 Cheung Sha Wan Road, Lai Chi Kok, Kowloon, Hong Kong.

The Kodak trademark, logo and trade dress are used under license from Kodak.
All information contained in this document is subject to change without notice.

Customer Service: sales@starglory.com.hk