


KODAK Portable Wireless Speaker

2CH Stereo Sound PWS-2276

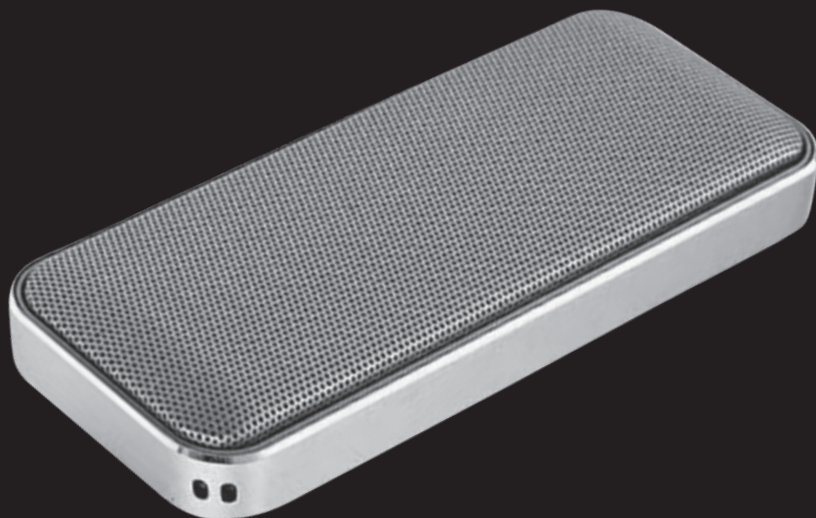

User Manual

KODAK Portable Wireless Speaker PWS-2276

Please read this manual carefully before operating the speaker.

Please store this manual with you for future reference.

INTRODUCTION

Congratulations on your purchase!


We encourage you to take a few minutes to read this manual which describes the product and includes step-by-step instructions to help you to enjoy the product features. Read and understand all the safety instructions before using your product. If you have any questions about these product, its installation or its operation, please contact your retailer or customer service.

SAFETY AND PRECAUTIONS

1. Do not drop, disassemble, deform, modify or insert any objects into this product.
2. Do not attempt to repair, modify or disassemble the product yourself. This product does not contain any user-serviceable components and may void the warranty.
3. Do not clean the product with alcohol, ammonia based cleaners and abrasive cleaners.
4. Do not place this product in to contact with any sharp objects as this may cause scratches and operating damage.
5. Do not attempt to replace the product battery, it is built-in and is not user changeable.
6. Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
7. Dispose of the product and the product's battery in accordance with local laws and regulations.
8. Avoid using in damp or corrosive environment.

PRODUCT OVERVIEW

Top panel operation

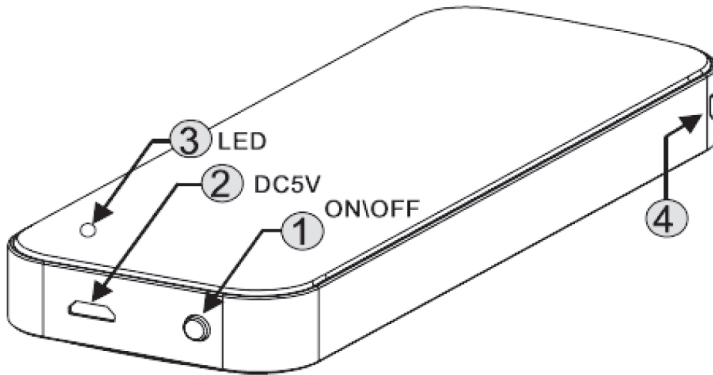

1. Multi-Functional Button: Power ON/OFF, Play/Pause, Answer/End Calls
2. Type-C Charging Port
3. Indicator light
4. Lanyard hole

BASIC OPERATION

TURNING THE UNIT ON/OFF

Long press the multi-functional button on the side panel to power on/off the speaker. Speaker will enter Bluetooth pairing mode.

BLUETOOTH OPERATION

Power on the speaker and it will enter Bluetooth mode, red and blue indicator light will flash alternately. Put the Bluetooth device within 10 meters, turn on the Bluetooth function on your device and search for “PWS-2276” and connect. Enter “0000” password if required. Once the pairing is completed unit will start playing the music from your device. Short press multi-functional button to play or pause the music.

ANSWER A PHONE CALL

When the speaker is connected to your smartphone, press multi-function button to answer the call, press the button again to end the call.

PAIRING WITH COMPUTER

If your PC does not support Bluetooth function, you can use Bluetooth USB adaptor 4.0 or above (not supplied). Plug in the adaptor and turn on the speaker to enter pairing mode. Search for “PWS-2276” and connect. Once the pairing is completed you can enjoy the music from your PC.

CHARGING THE SPEAKER

This speaker has a built-in rechargeable battery. Please use the supplied Type-C cable to charge the battery. While charging red indicator light will flash and will turn blue when battery is fully charged. For the first time use please charge for 8 hours or more.

Note:

1. Please choose the charger that passes regular manufacturer's safety certification.
2. Avoid repeated/continuous charging of the speaker; it will degrade battery performance overtime, which is a normal phenomenon for all rechargeable batteries.
3. Avoid charging the speaker in your pocket.
4. Do not charge in high temperature or damp environment.

Red light on : The battery is charging

Blue light on : Fully charged

To prolong battery lifespan, fully charge at least once every 45 days

SPECIFICATION

Wireless connection

Bluetooth Version	5.1
Bluetooth profiles	A2DP, AVRCP, HFP, HSP
BT Transmission Range	About 10m (without obstacles)
Wireless output	Class2 : +4dBm (-6 ~+4dBm)
Wireless band	ISM band : 2.402-2.480GHz
Password	0000

Battery

Battery Type	Lithium polymer battery
Capacity	3.7v  750mAh, 2.78w
Battery life	Cycle charge 500 times
Working time	About 5 hours calls & music (50% volume)
Charge time	About 2.5 hours

Speaker

Speaker size	φ32mm x2 +vibrating diaphragm
Speaker Impedance	4 Ohm
Output	5W x2
Frequency Response	180Hz-18KHz
Sensitivity	95 dBm
Distortion	<5%

Others

Microphone sensitivity	-45db
Standby current	<1 mA
Consumption	42 mA<I<700 mA ; 0.15 W<P<2.78 W
Charge port	Type-C, DC 5V
Product size	124*47*20mm
Product weight	115 g
Material	Aluminum, Leather, Metal grill

Accessories

Speaker x 1
Type-C Charging Cable x 1
Detachable Neck/Hand Strap Lanyard x 1
User's manual x 1
Warranty card

Note: Specifications are subject to change for continuous improvement without prior notice.

INTRODUCCIÓN

¡ FELICITACIONES POR SU COMPRA !

Lo exhortamos a dedicar unos minutos a leer este manual, el cual describe el producto en incluye instrucciones paso a paso que lo ayudarán a disfrutar de las funciones del producto. Lea todas las instrucciones de seguridad antes de usar su producto.


Si tiene alguna pregunta sobre estos productos, su instalación o su operación, contacte a la tienda donde los compró o al servicio de atención al cliente.

SEGURIDAD Y PRECAUCIONES

1. No deje caer, ni desensamble, modifique o inserte ningún objeto en este producto.
2. No intente reparar, modificar, desensamblar el producto usted mismo. Este producto no contiene ningún componente que pueda reparar el usuario, y puede invalidar la garantía.
3. No limpie el producto con alcohol, limpiadores con amoníaco o limpiadores abrasivos.
4. No coloque este producto en contacto con objetos filosos, ya que esto podría causar rasguños y daños operativos.
5. No intente reemplazar la batería del producto, está integrada y no la puede cambiar el usuario.
6. Observe todas las señales y figuras que requieran apagar un dispositivo eléctrico o producto de radio RF en ciertas áreas designadas.
7. Deseche el producto y su batería en conformidad con las leyes y regulaciones locales.
8. Evite usar en ambientes húmedos o corrosivos.

DESCRIPCIÓN GENERAL DEL PRODUCTO

Operación del panel superior

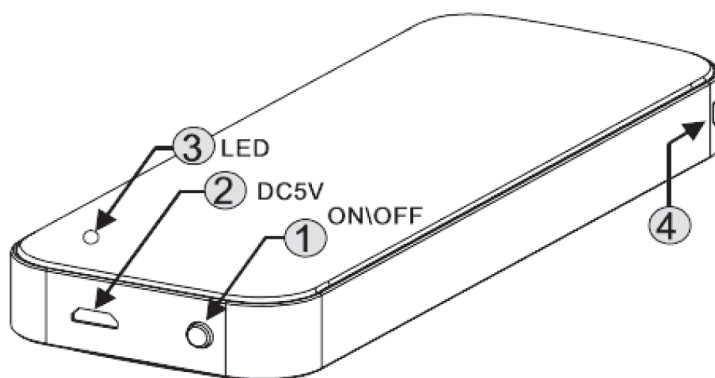

1. Botón multifuncional: Encendido/apagado, reproducción/pausa, respuesta/ finalización de llamados
2. Puerto de carga de tipo C
3. Luz indicadora
4. Orificio para cordón

OPERACIÓN BÁSICA

ENCENDIDO Y APAGADO DEL APARATO

Presione prolongadamente el botón multifuncional del panel lateral para encender/apagar el altoparlante. El altoparlante entrará en el modo de emparejamiento Bluetooth.

OPERACIÓN DEL BLUETOOTH

Encienda el altoparlante, entrará en modo Bluetooth y la luz indicadora roja y azul parpadeará alternativamente. Coloque el dispositivo Bluetooth a menos de 10 metros, active la función Bluetooth en su dispositivo, busque "PWS-2276" y conéctese. Ingresar el código «0000» si se requiere. Una vez terminado el emparejamiento, la unidad comenzará a reproducir la música de su dispositivo. Presione brevemente el botón multifuncional para reproducir o pausar la música.

RESPONDER UN LLAMADO TELEFÓNICO

Cuando el altoparlante esté conectado al smartphone, presione el botón multifunción para responder al llamado y vuelva a presionarlo para finalizarlo.

EMPAREJAMIENTO CON COMPUTADORA

Si su computadora no admite la función Bluetooth, puede utilizar un adaptador Bluetooth USB 4.0 o superior (no suministrado). Enchufe el adaptador y encienda el altoparlante para entrar en el modo de emparejamiento. Busque "PWS-2276" y conecte. Una vez completado el emparejamiento podrá disfrutar de la música desde su computadora.

CARGA DEL ALTOPARLANTE

Este altoparlante lleva incorporada una batería recargable. Use el cable suministrado tipo C para cargar la batería. Mientras se carga, la luz indicadora roja parpadeará y se volverá azul cuando la batería esté completamente cargada. Para el primer uso, cárguela por 8 horas o más.

Nota:

1. Elija el cargador que supere la certificación de seguridad habitual del fabricante.
2. Evite la carga repetida/continua del altoparlante; esto reducirá el tiempo extra de rendimiento de la batería, que es un fenómeno normal para todas las baterías recargables.
3. Evite cargar el altoparlante en su bolsillo.
4. No lo cargue en ambientes a alta temperatura o húmedos.

Luz roja encendida: La batería se está cargando

Luz azul encendida: Completamente cargada

Para prolongar la vida útil de la batería, cárguela completamente una vez cada 45 días.

ESPECIFICACIONES

Conexión inalámbrica

Versión de Bluetooth	5.1
Perfiles de Bluetooth	A2DP, AVRCP, HFP, HSP
Rango de transmisión BT	Aproximadamente 10 m (sin obstáculos)
Salida inalámbrica	Clase 2 : +4dBm (-6 ~+4dBm)
Banda inalámbrica	Banda ISM: 2.402-2.480GHz
Contraseña	0000

Batería

Tipo de batería	Batería de polímero de litio
Capacidad	3,7V $\equiv$ 450mAh, 1,67W
Duración de la batería	Ciclo de carga 500 veces
Tiempo de trabajo	Alrededor de 4 horas de llamados y música (50% del volumen)
Tiempo de carga	Alrededor de 2 horas

Altoparlante

Tamaño del altoparlante	$\varnothing$ 32 mm x1
Impedancia del altoparlante	4 ohmios
Salida	5W x1
Respuesta en frecuencia:	200Hz ~20.000Hz
Sensibilidad	95 dBm
Distorsión	<5%
Diafragma vibratorio	$\varnothing$ 32 mm x1

Otros

Sensibilidad del micrófono	-45db
Corriente en espera	<1 mA
Consumo	42 mA<I<700 mA ; 0,15 W<P<2,6 W
Puerto de carga	Tipo-C, CC 5V
Dimensiones del producto	91 x 47 x 20 mm
Peso del producto	81 g
Material	Aluminio, cuero, rejilla metálica

Accesorios

1 altoparlante
1 cable de carga tipo C
1 cordón de cuello/mano desmontable
1 Manual de usuario
Tarjeta de garantía

Nota: Las especificaciones están sujetas a cambio para el mejoramiento continuo sin previo aviso.

www.starglory.com.hk/kodak

© 2023 Star Glory Ltd.

Room 905-907, 9/F., Cheung Sha Wan Plaza, Tower 1,

833 Cheung Sha Wan Road, Lai Chi Kok, Kowloon, Hong Kong.

The Kodak trademark, logo, and trade dress are used under license from Kodak.

All information contained in this document is subject to change without notice.